

# ParcoCem

**Plus**  
Waterproof Cement Paint

**Surface Preparation :** Newly plastered surfaces should be allowed to mature 8 - 12 weeks before application of Parcocem Plus to achieve complete dryness & proper setting. Surface to be painted should be free from efflorescence (saltpetre) or algae & fungus at the time of application of Parcocem Plus. To treat efflorescence (saltpetre) on freshly plastered walls, apply on the affected surface 8-10% solution of Hydrochloric Acid in water with a paint brush . Leave it for 15 - 20 minutes or when bubbling on the surface stops . Wash down the surface liberally with water. (Ensure wearing of rubber gloves during this exercise). Algae & fungus can be treated, by treating the infected area with either a fungicidal wash or by applying 4 - 5% solution in water of calcium hypochlorite (with approx. 35% chlorine content) or a household bleach by brush. Leave it for 24 hours. Wash liberally with clean water and stiff wire brush and allow it to dry. All surfaces where Parcocem Plus is to be applied should be clean , stable, dry & free from any cracks, loose flaky coatings, algae, fungus, grease, dirt, dust, distemper, lime etc. Walls with multi coats of cement paint should be thoroughly scrapped with stiff bristle brush and washed with water before application of new coating of cement paint. Do not use sand paper.

**Mixing of Paint :** Roll or shake the bag to loosen the contents. Take one volume of water in a clean container. Add two volumes of Parcocem Plus. Stir well with a thick wooden stick or with hand to get a thick soft paste. Add another volume of water to make it brushable consistency. The paint thus prepared should be used within two hours. Keep the bag tightly closed in a dry place when not in use.

**Application :** Before use of Parcocem Plus, walls should be pre-wetted by spray of water. In summer months the walls become very dry and warm because of high temperature. It is therefore advisable to pre-wet only small areas to ensure retaining of moisture at the time of application of Parcocem Plus. Avoid application of Parcocem Plus in strong and direct sunlight.

**Water Curing :** After 8 to 10 hours of application of the first coat of Parcocem Plus, the surface should be sprayed with clean potable water. Please note that if the curing is not done, it will result in non-setting of Parcocem Plus. After setting of first coat, the surface should again be wetted before the application of the second coat of Parcocem Plus . After 8 to 10 hours of second coat, final curing should be done twice a day for 2 - 3 days.



Dealer's Stamp

  
**acro paints**

### Acro Paints Limited

Acro House, 5/3 Kirti Nagar Industrial Area, New Delhi-110015  
Ph.: 011-43340000 (100 Lines), Toll Free : 1800-11-8880,  
E-mail : support@acropaints.net  
Website : www.acropaints.net, www.spandezia.com  
CIN No. : U24119DL1989PLC036308




 **acro paints**  
**ParcoCem**  
**Plus**  
Waterproof Cement Paint





OFF WHITE 1200 - P

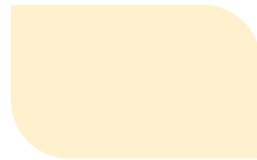


BONE WHITE 1204 - P



ROYAL IVORY 1114 - P



IVORY 1201 - P

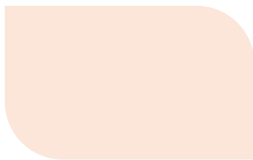

ROSE WHITE 1241 - P



ANTIQUE WHITE 1418 - P



PEACH BLOOM 1415 - P



TALC 1170 - P



LIGHT BISCUIT 1245 - P



MID CREAM 1202 - P

- Shades shown are for indication purpose only. Actual Shades may vary.
- Also available in White & Black



PALE ROSE 1422 - P



PINK 1102 - P




PEACH 1423 - P



ROYAL PINK 1426 - P



DHOLPUR STONE 1250 - P

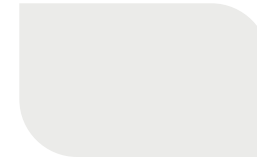

SILVER GREY 1301 - P



PALE GREY 1308 - P




DOVE GREY 1312 - P




TERRACOTTA 1410 - P

Special shades supplied on request in quantity of minimum one tonne.

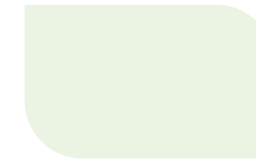

APPLE WHITE 1601 - P

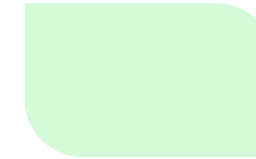

COOL BREEZE 1118 - P



AQUAMARINE 1604 - P



APPLE GREEN 1606 - P



LIGHT OLIVE 1623 - P

# ParcoCem

**Plus**

**WATERPROOF CEMENT PAINT**